
 
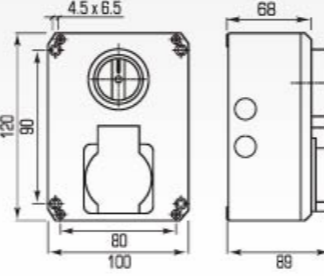

 
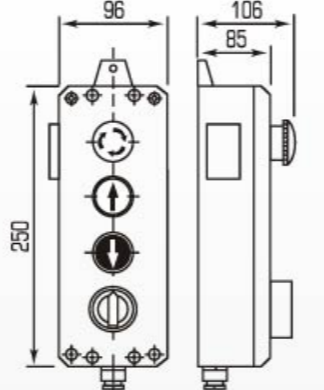

 
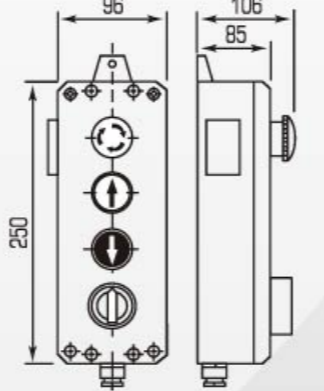










检修盒 Inspection box

	<p>转换开关 0 - 1 , 90° switching</p> <p>1 Schuko socket outlet 16A</p>	 <p>RJ1-A200ZC</p>	
	<p>紧急停止 Ø40 twist to release</p> <p>1 Up push button - 2NO (↑)</p> <p>1 Down push button - 2NO (↓)</p> <p>1 Cam switches 1-2 90° switching - 2NO + 2NC</p> <p>1 Schuko socket outlet 16A</p>	 <p>RJ1-A400 SAAZ-C</p>	
	<p>紧急停止 Ø40 twist to release</p> <p>1 Up push button - 2NO (↑)</p> <p>1 Down push button - 2NO (↓)</p> <p>1 Cam switches 1-0-2 90° switching - 2NO + 2NC</p> <p>1 Schuko socket outlet 16A</p>	 <p>RJ1-A400 SAAZ-C-II</p>	
	<p>紧急停止 Ø40 twist to release</p> <p>1 Up push button - 2NO - 1NC (↑)</p> <p>1 Down push button - 2NO - 1NC (↓)</p> <p>1 Alarm push button - 1NO (⊕)</p> <p>1 Common push button - 2NO (⊕)</p> <p>1 Cam switches 1-2 90° switching - 3NO + 3NC</p> <p>1 Schuko socket outlet 16A</p>	 <p>RJ1-A700 SAAZAAC</p>	

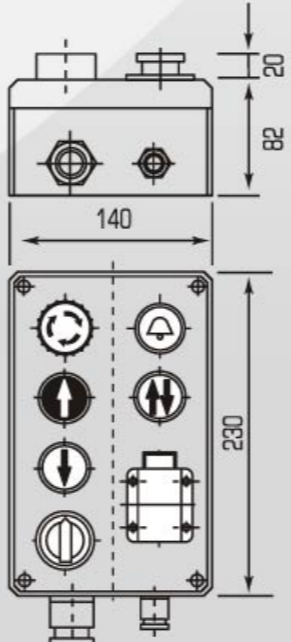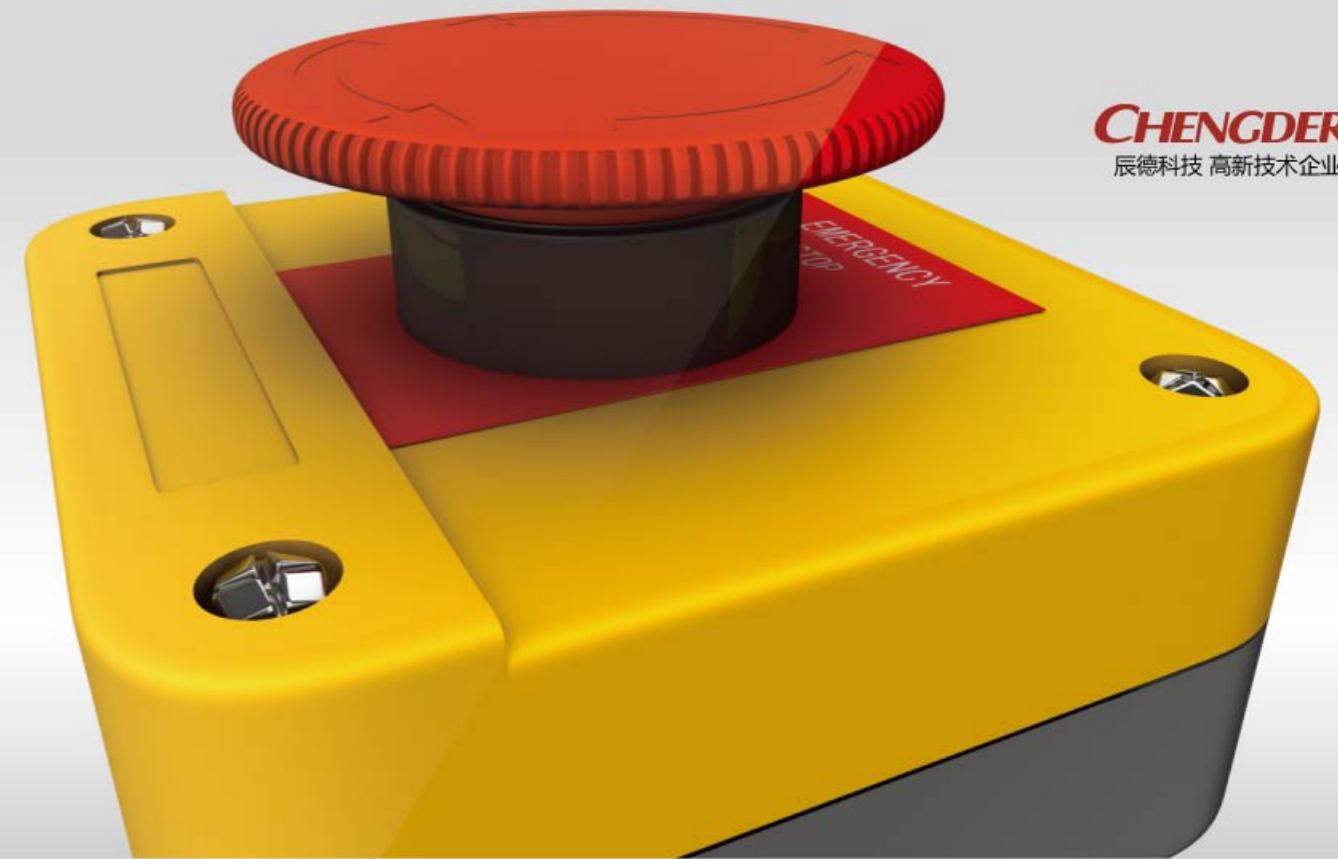

<p>XAL-J174</p> 	<p>XAL-K174</p> 	
<p>Examine and repair switch LLPA7-4</p> 	<p>Examine and repair switch LLPA7-5</p> 	<p>Examine and repair switch LLPA7-6</p> 